



marantz®

CD Player HD-CD1

 
Quick Start Guide

Start Here
Commencez ici
Iniciar aquí




Before you begin


What's In The Box



HD-CD1

 


Power cord

 


Remote and batteries



 Product manual
on CD-ROM



Coaxial cable (black)

 


Remote Connector cable (orange)

- For more information, visit www.marantz.com
- Refer to the enclosed CD-ROM manual or Online Manual for other functions information and operation procedure details.
manuals.marantz.com/HDCD1/NA/EN/




1. Connection


- 1 Connect the coaxial audio cable from the HD-CD1 to your amplifier.

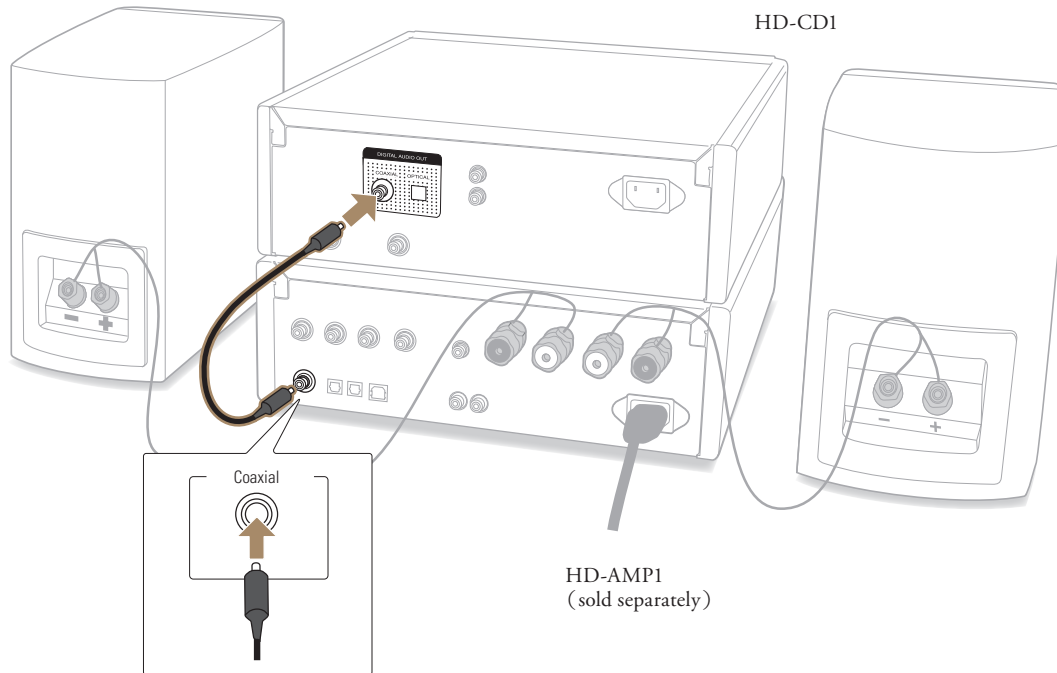

- 2** Connect the power cord between the HD-CD1 and a power outlet.

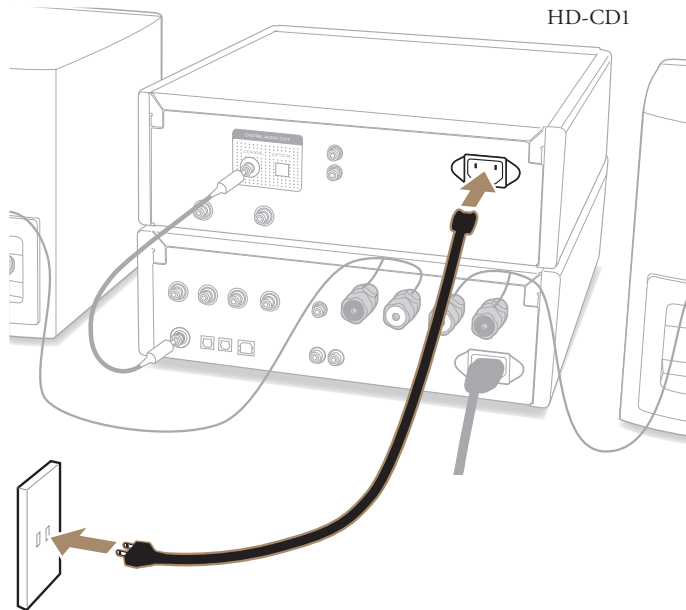


- 3** Insert the batteries into the remote.

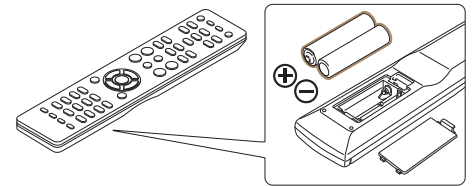


2. Enjoying music from your Disc

- 1 Press the Open/Close button to open the disc tray.

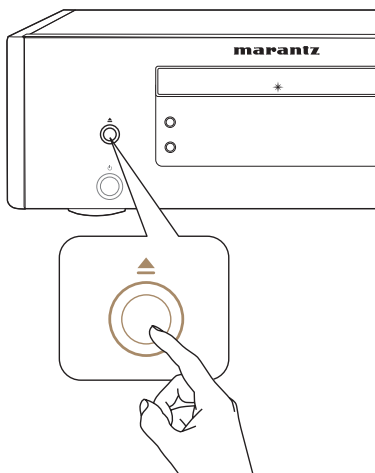

- 2 Place a CD in the disc tray.

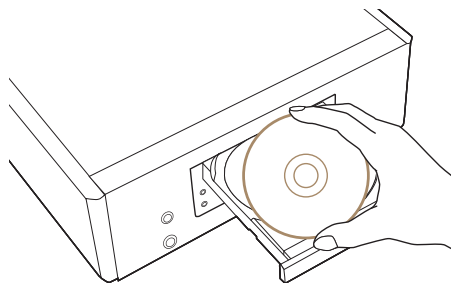

- 3 Press the Play button to start playback.



www.marantz.com

You can find your nearest authorized distributor or dealer on our website.

marantz[®] is a registered trademark.